


# NO-COAT®

## FLEXIBLE DRYWALL CORNER

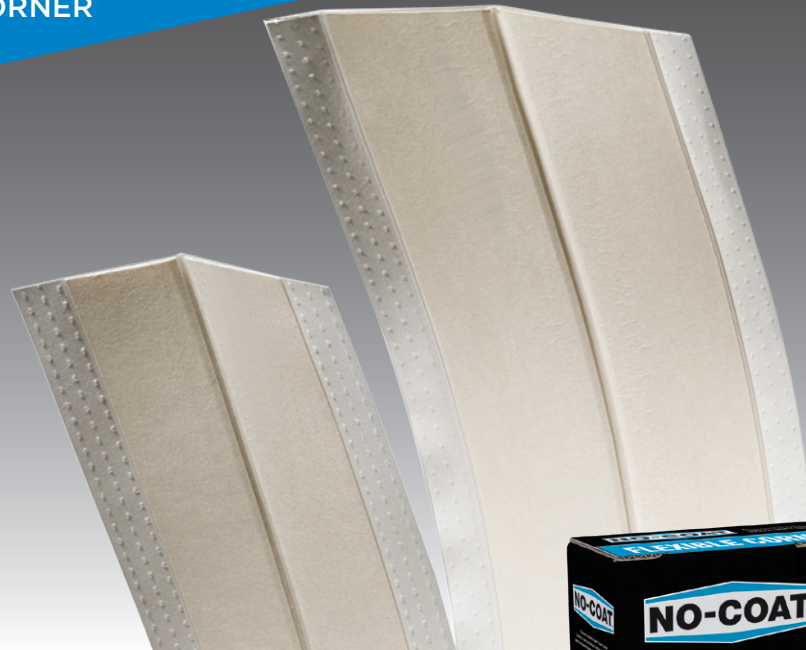

## Mud Applied Drywall Corner Bead that Flexes to Any Inside or Outside Corner Angle

NO-COAT® flex roll products are ideal for off-angle applications, both short and long runs. Built-in flexible hinge fits any inside or outside corner angle and creates crisp, straight lines.

- Ideal for **any** angle of **any** length.
- Stays straight and holds the desired angle due to its memory-free hinge.
- Strong corner that resists impacts and prevents edge cracking.
- Lower total installed cost (TIC), while providing a tough, good-looking corner.
- Flange width hides irregular framing.
- SLAM corner design ensures strength, durability, labour savings and eliminates costly callbacks.



Made With  
**SLAM**  
TECHNOLOGY.

### PRODUCT DATA

PRODUCT	CERTAINTEED CODE	PACKAGE SIZE
NO-COAT Flexible Corner 325	639586	10 Roll / Master Pack
NO-COAT Flexible Corner 450	639585	4 Roll / Master Pack

**CertainTeed**  
SAINT-GOBAIN



### CERTAINTEED NO-COAT® FLEXIBLE CORNERS

Provides a perfect corner at any angle needed everytime. Applied with joint compound, it has a uniform, strong, structural bond because of its paper backing preventing cracking and callbacks. High quality formulated face paper is perfect for applying paint or texture.

**NO-COAT Flexible Corner 325** is ideal for runs under 10'. Great for all off angles, stand ups and hiding areas of irregular framing.


**NO-COAT Flexible Corner 450** gives extra stiffness making it easier to work with runs longer than 10', such as vaulted and cathedral ceilings. The extra wide flange will cover large gaps and poorly framed corners. Its size also offers substantial impact resistance.

High strength, tapered, copolymer core will not split or dent


Formulated Surface Paper accepts any finish and resists abrasion

NO-COAT flexes to any inside or outside corner angle required


Memory-Free Hinge adjusts to any angle, eliminates pre-creasing, pre-measuring and allows instant application

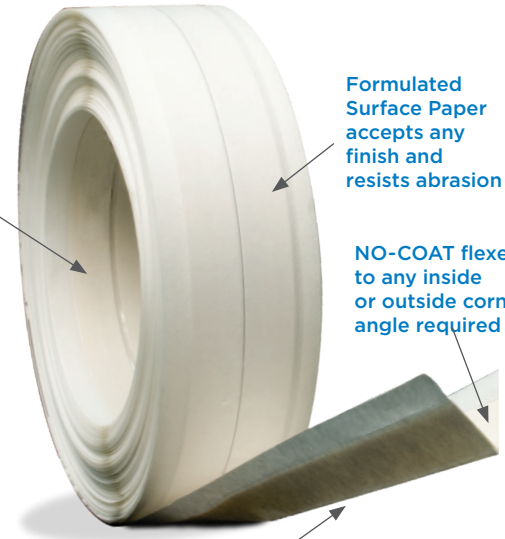


### INSTALLATION INSTRUCTIONS

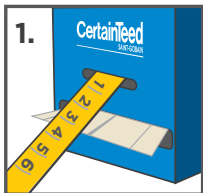


1. Open NO-COAT box and feed product through slot on side of box. Insert hook of tape measure into narrow slot to measure length of NO-COAT needed. Cut to length with scissors.

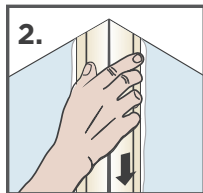

2. With 4" - 6" taping knife, apply All-Purpose or Taping drywall compound to corner and press NO-COAT into position.

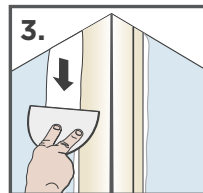

3. Remove excess mud with the same taping knife and let dry.

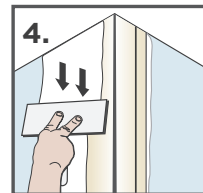

4. Use a 6" - 8" finishing knife to skim over edges of corner; let dry.



5. Sand and finish.

### CERTAINTEED DOUBLE BARREL HOPPER®

For use with NO-COAT inside, outside and bullnose corners and flexible corner rolls. Accommodates all inside and outside angle without time-consuming part changeovers and reconfiguration.



USGBC® and the related logo are trademarks owned by the U.S. Green Building Council® and are used with permission.



The Health Product Declaration® logo is a trademark or service mark of Health Product Declaration Collaborative, Inc., in the United States and in other countries and is being used herein under license.



### CertainTeed

CEILINGS • DECKING • FENCE • GYPSUM • INSULATION • RAILING • ROOFING • SIDING • TRIM  
20 Moores Road, Malvern, PA 19355 800-233-8990 [certainteed.com](http://certainteed.com)